


PB4 PB4-H

ALGE-TIMING



Manual

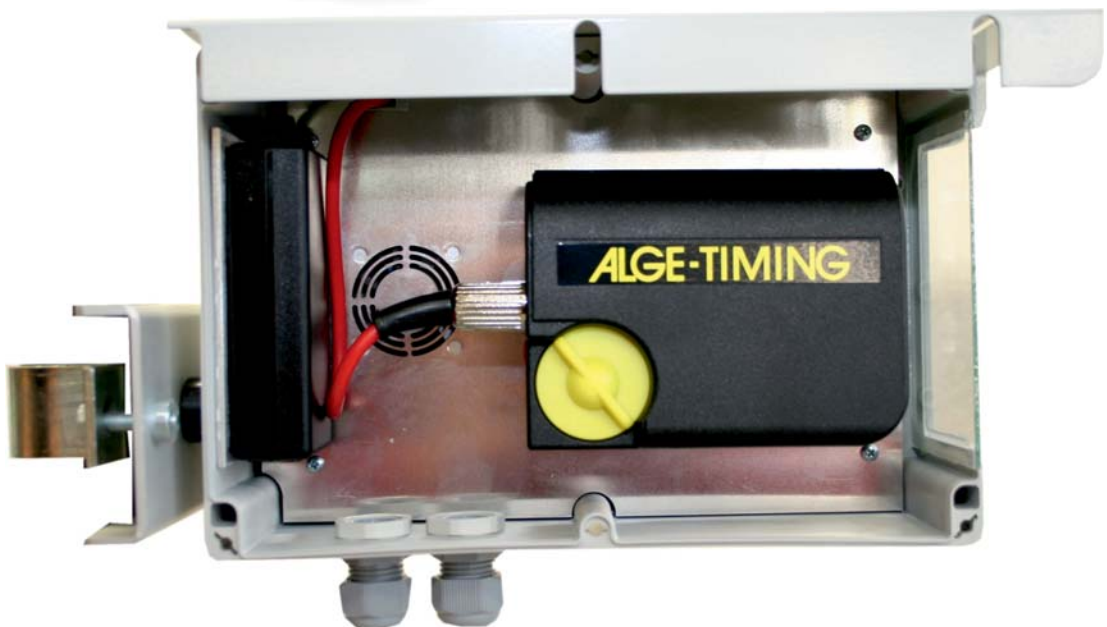


Use a 5 cm round tube (pipe) to fasten the Photocell Box PB4 or PB4-H. The Photocell box has a holder that fits for a 5 cm tube. You open the two screws on the Photocell Box and screw the holder at the tube.

At the bottom of the Photocell Box are two leading out to get with the photocell cable and power cable (if necessary) into the photocell case.

The photocell you screw into the box from the side (see picture below).



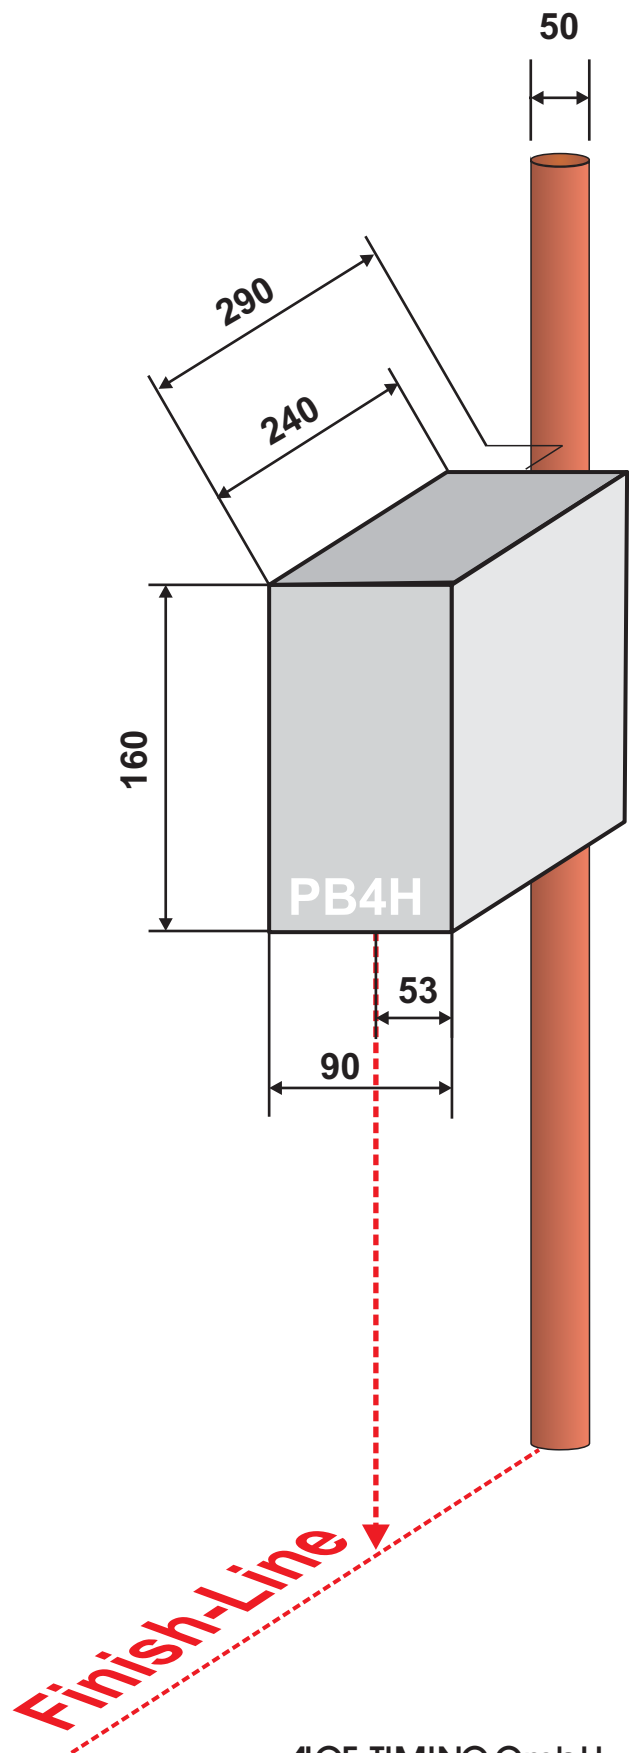

ALGE-TIMING GmbH
Rotkreuzstrasse 39
A-6890 Lustenau
Austria
Tel: +43-5577-85966
Fax: +43-5577-85966-4
office@alge-timing.com
www.alge-timing.com